 




VICTORINOX

Battery change

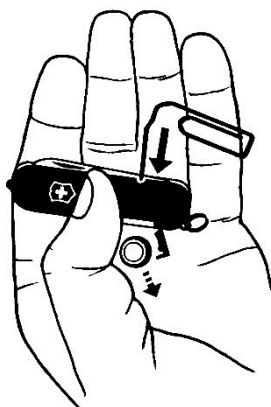

 
New-style battery cover

SwissLite, Signature Lite, Midnite Manager, Midnite MiniChamp


To change the battery, open the small battery cover. Use a paperclip to push the battery into your open hand. With the «+» sign facing **down**, carefully push the new battery into the compartment. Now carefully close the cover.

Battery type: 1.55 V 389/390 (SR1130W) Silver Oxide

Battery type for Classic models with the old-style battery cover: CR1025, 3V

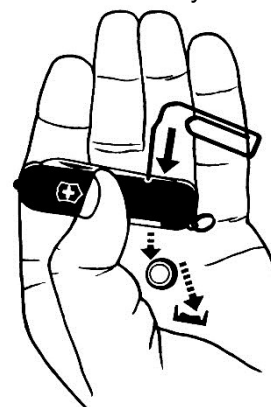


Old-style battery cover

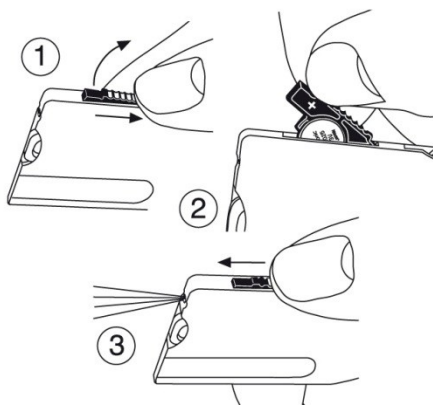 

SwissCard Lite

Push the LED switch right back until it clicks. You can now remove the LED compartment. Insert the new battery into the compartment with the «+» sign facing **up**. Now press the battery compartment back into the housing of your SwissCard Lite.

 Battery type: CR1025, 3V

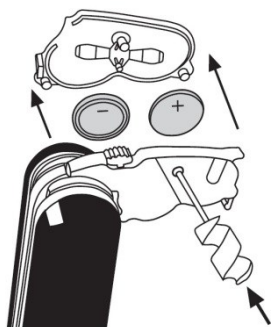

Spartan Lite, Huntsman Lite, Mountaineer Lite, Traveller Lite, CyberTool Lite, Expedition Kit, SwissChamp XAVT

Unfold the LED module and use the mini-screwdriver to push the housing cover off. Insert the two batteries as indicated by the markings on the housing.

 
 
Battery type: Two CR1225, 3V lithium batteries



Traveller, Traveller Lite, SwissChamp XAVT

Use the mini-screwdriver to open the fold-out battery compartment. Insert the new battery into the compartment with the «+» sign facing **down**. Now carefully close the cover.

Battery type: CR1225, 3V

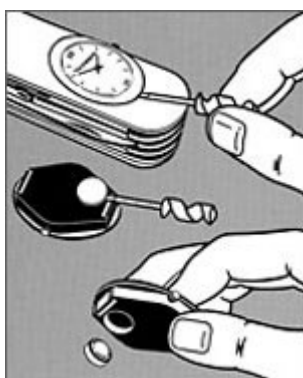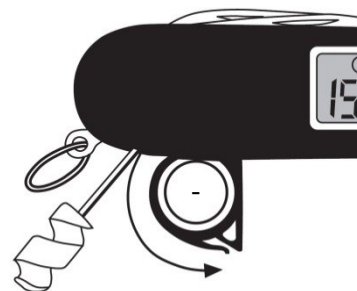

TimeKeeper

Use the mini-screwdriver to remove the watch from the grip. Now remove the white plastic cover. You can then change the battery. Insert the new battery with the «+» sign facing **up**.

Battery type: 377/1.5V

Important:

Recycling batteries: **Never** throw batteries into household rubbish. Batteries must be recycled.

New battery: Before inserting a new battery, always check its expiry date.